

## USER INSTRUCTIONS

### FIRE AND BURGLARY SAFE CABINET

### BRF & FSB



#### General information

The lock can handle two opening codes: code 1 (Master code) and code 2. The master code is entered from the factory and temporarily set to **123456**. Code 2 is subordinate to the Master code and is not entered from the factory. The master code must be changed before code 2 can be entered.

The lock signals with a beep and flash when the operation is correct and a long beep and red light when the operation is incorrect. Always program with the door open and check the result before closing the door.

#### To open the safe

1. Press "ON". The lock signals with a beep and the green light comes on.
2. Enter code 1 (factory set code 1: 123456) or code 2. The lock signals with a flash.
3. Turn the lock knob clockwise within 4 seconds.

#### To lock the safe

1. Close the door completely. Make sure there are no obstacles around the lock.
2. Turn the knob counterclockwise until it stops.

#### To change code 1 (Master code)

1. Open the lock.
2. Press "ON" and then "ENTER".
3. Press 1 and then "ENTER".
4. Enter the current code and then press "ENTER". The lock signals with 2 beeps and flashes.
5. Enter a new 6–8 digit code and then press "ENTER". The lock signals with 2 beeps and flashes.
6. Enter the new 6–8 digit code and then press "ENTER". The lock signals with 2 beeps and flashes.

#### To change code 2

1. Open the lock.
2. Press "ON" and then "ENTER".
3. Press 2 and then "ENTER".
4. Enter the Master code and then press "ENTER". The lock signals with 2 beeps and flashes.
5. Enter a new 6–8 digit code and then press "ENTER". The lock signals with 2 beeps and flashes.
6. Enter the new 6–8 digit code and then press "ENTER". The lock signals with 2 beeps and flashes.

#### To change code 2 without Master code

1. Open the lock.
2. Press "ON" and then "ENTER".
3. Press 3 and then "ENTER".
4. Enter the current code 2 and then press "ENTER". The lock signals with 2 beeps and flashes.
5. Enter a new 6–8 digit code and then press "ENTER". The lock signals with 2 beeps and flashes.
6. Enter the new 6–8 digit code and then press "ENTER". The lock signals with 2 beeps and flashes.

#### Erase code 2

1. Open the lock.
2. Press "ON" and then press "ENTER".
3. Press 0 and then press "ENTER".
4. Enter the Master code and then press "ENTER".

For battery change, see next page→

## To change battery


- When the battery level is low, the lock indicates by a red light flashing 5 times, with an accompanying beep after "ON" has been pressed. If this occurs, immediately replace the battery that sits on the inside of the top of the door.

Change to an alkaline 9 volt battery (6LR61).



- If the battery is completely exhausted, emergency power can be supplied to the lock from the outside as follows:

1. Place a 9V battery against the poles that are below and above "PS", see picture below.
2. Observe the location of the poles + top - bottom.
3. Enter the unlock code as usual.
4. Replace the battery on the inside of the cabinet.

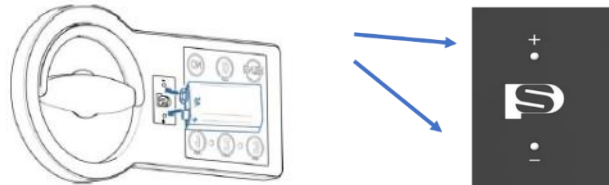

## BRUKSANVISNING BRANDKLASSADE STÖLDSKYDDSSKÅP BRF & FSB



### Allmänt

Låset kan hantera två öppningskoder: Masterkod och kod 2. Masterkoden är inlagd från fabrik och tillfälligt inställd på 123456. Kod 2 är underställd Masterkoden och är ej inlagd från fabrik. Masterkoden måste ändras innan man kan lägga in kod 2.

Låset signalerar med ett pip och blink vid korrekt åtgärd och långt pip och rött ljus vid felaktig åtgärd. Programmera alltid med öppen dörr och kontrollera resultatet innan dörren stängs.

### Att öppna

1. Tryck "ON". Låset signalerar med ett pip och det gröna ljuset tänds.
2. Knappa in kod 1 (fabriksinställd kod 1: 123456) eller kod 2. Låset signalerar med ett blink.
3. Vrid låsets vred medurs inom 4 sekunder.

### Att låsa skåpet

1. Stäng dörren helt. Se till att inget hamnar i kläm.
2. Vrid vredet moturs till stopp.

### Att ändra Masterkod

1. Öppna låset
2. Tryck "ON" och sedan "ENTER".
3. Tryck 1 och sedan "ENTER".
4. Knappa in nuvarande kod och sedan "ENTER". Låset signalerar med 2 pip och blink.
5. Knappa in ny 6–8 siffrig kod och sedan "ENTER". Låset signalerar med 2 pip och blink.
6. Knappa in den nya 6–8 siffriga koden igen och sedan "ENTER". Låset signalerar med 2 pip och blink.

### Att lägga in Kod 2

1. Öppna låset.
2. Tryck in "ON" och sedan "ENTER".
3. Tryck 2 och sedan "ENTER".
4. Knappa in Masterkoden och sedan "ENTER". Låset signalerar med 2 pip och blink.
5. Knappa in ny 6–8 siffrig kod och sedan "ENTER". Låset signalerar med 2 pip och blink.
6. Knappa in den nya 6–8 siffriga koden igen och sedan "ENTER". Låset signalerar med 2 pip och blink

### Att byta kombination på Kod 2 utan Masterkod

1. Öppna låset.
2. Tryck in "ON" och sedan "ENTER".
3. Tryck 3 och sedan "ENTER".
4. Knappa in nuvarande kod 2 och sedan "ENTER". Låset signalerar med 2 pip och blink.
5. Knappa in ny 6–8 siffrig kod och sedan "ENTER". Låset signalerar med 2 pip och blink.
6. Knappa in den nya 6–8 siffriga koden igen och sedan "ENTER". Låset signalerar med 2 pip och blink

### Radera Kod 2

1. Öppna låset.
2. Tryck "ON" och sedan "ENTER".
3. Tryck 0 och sedan "ENTER"
4. Knappa in Masterkoden och sedan "ENTER".

För batteribyte, se baksidan→

## Att byta batteri

- När batterinivån är låg indikerar låset genom att den röda lampan blinkar 5 gånger, med tillhörande pip efter att "ON" tryckts in. Byt då genast batteriet som sitter på insidan av dörrens ovsida. Byt till ett alkaliskt 9 volts batteri (6LR61).
- Om batteriet är helt slut kan man nødströmsförsörja låset från utsidan på följande sätt:
  1. Lägg emot batteriet på polerna som finns under och ovan "PS", se bilden.
  2. Observera polernas placering + överst – underst.
  3. Slå öppningskoden som vanligt.
  4. Byt batteriet på skåpets insida.

